




ALUMAX

BATH ENCLOSURES

a product of Alcoa

PO Box 40, Magnolia, AR 71754-0040 (870) 234-4260

INSTALLATION INSTRUCTIONS

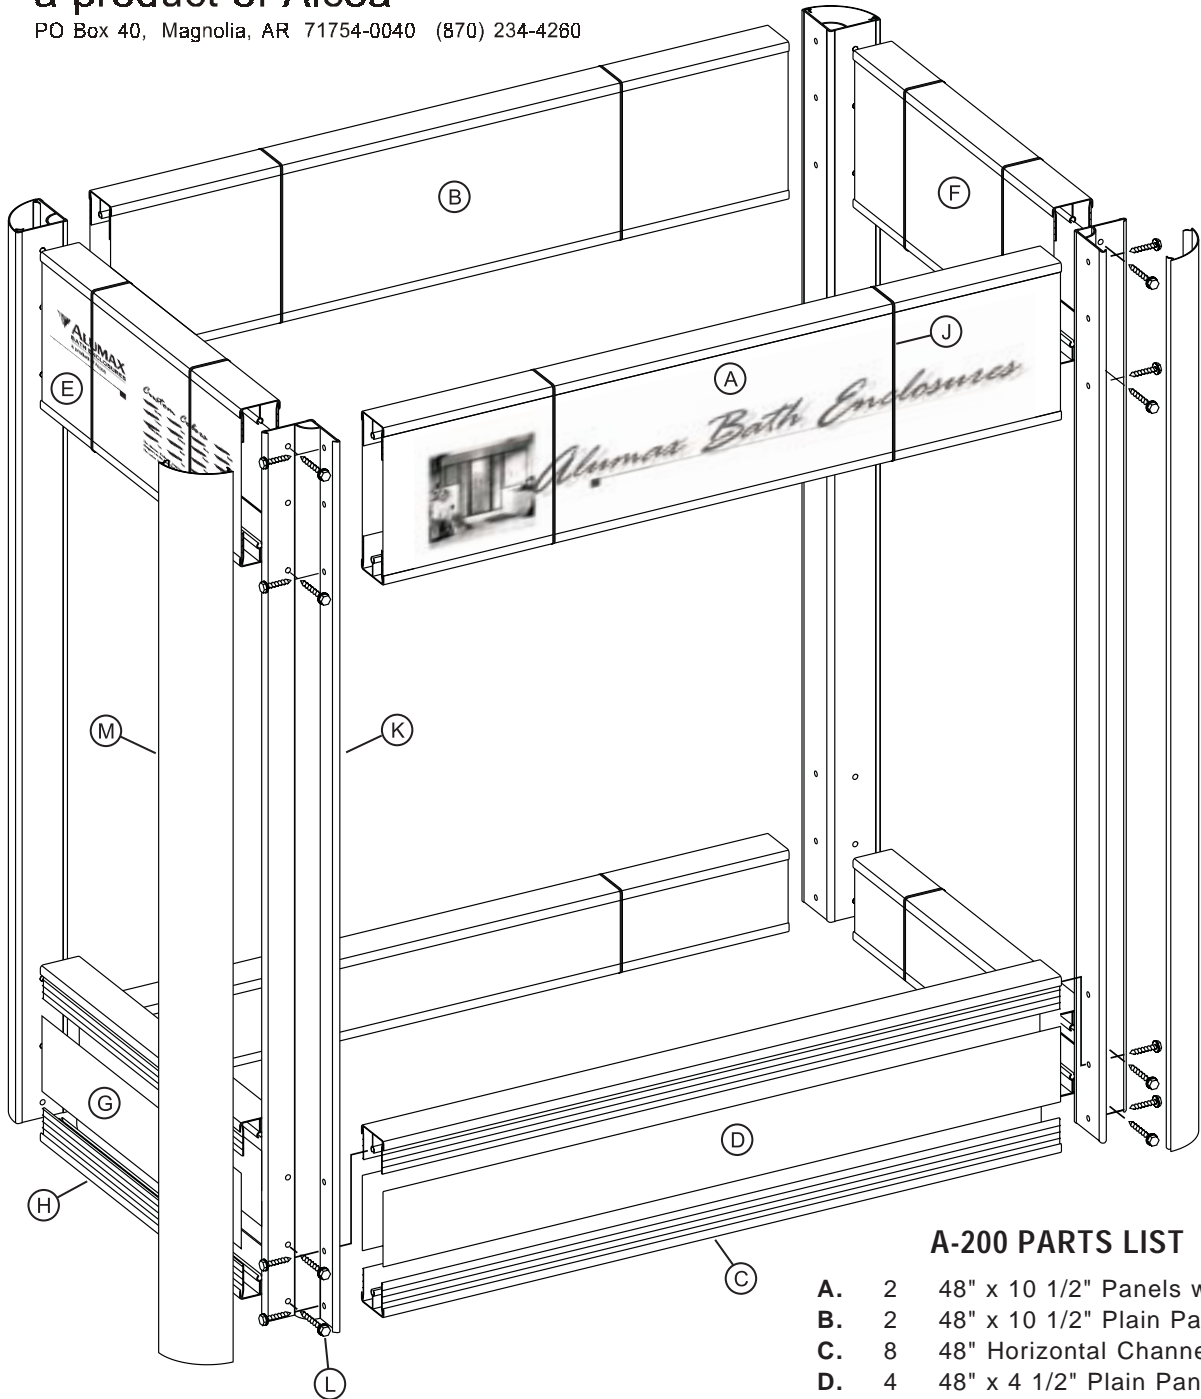

A-200 POINT-OF-PURCHASE DISPLAY

A-200 PARTS LIST

A.	2	48" x 10 1/2" Panels with Logo
B.	2	48" x 10 1/2" Plain Panels
C.	8	48" Horizontal Channels
D.	4	48" x 4 1/2" Plain Panels
E.	2	24" x 10 1/2" Panels with logo
F.	2	24" x 10 1/2" Plain Panels
G.	4	24" x 4 1/2" Plain Panels
H.	8	24" Horizontal Channels
J.	16	Rubber Bands
K.	4	Corner Posts
L.	32	5/16" x 1 1/4" Hex Head Screws
M.	4	Snap-in Fillers

INSTALLATION NOTES: Unpack your A-200 unit carefully and inspect for freight damage. Lay out and identify all parts using the exploded view as a reference. If any parts are damaged or missing, refer to the descriptions noted in the instructions when contacting your dealer for replacements.

Tools required: 1/2" wrench or socket, knife.

INSTALLATION INSTRUCTIONS

1 There will be eight panel assemblies required: Two long top assemblies consisting of one long panel with logo (**A**), one long plain panel (**B**) and two long channels (**C**). Two long bottom assemblies consisting of two long plain panels (**D**) and two long channels (**C**). Two short top assemblies consisting of one short panel with logo (**E**), one 24" x 10 1/2" plain panel (**F**) and two short channels (**H**). Two short bottom assemblies consisting of two 24" x 4 1/2" plain panels (**G**) and two short channels (**H**).

Slide two panels into the slots in two of the channels. Slip a rubber band (**J**) over each end of the panel assembly and set it aside. Repeat for the other panel assemblies.

2 Lay one long top panel assembly (with logo up) and one long bottom panel assembly on a flat surface. Lay a corner post (**K**) on each side of the panel assemblies and line up the holes in the posts with the screw bosses in the horizontal channels. Attach the posts to the panel assemblies with eight 5/16" x 1 1/4" hex head sheet metal screws (**L**). Grip the horizontal channels securely while tightening the screws to prevent damage to the unit's finish. Set the post and panel assembly aside.

Repeat for the remaining long panel assemblies and corner posts.

3 Attach the top and bottom short panel assemblies to the corner posts with the remaining sheet metal screws. Cut the rubber bands off of the panel assemblies.

4 Move the display unit to its desired location before attaching the corner post fillers (**M**). Engage one side of each filler into a corner post and firmly snap into place. The corner fillers can be removed by inserting a wooden dowel or hammer handle in the top of the corner post assembly and prying outward.

5 Your Alumax A-200 island display unit is now ready for installation of two 48" wide and two 24" wide shower doors.